

The X40 Official Firmware Release Note (R0056)

- ① Release date : April 5th, 2017
- ② The version of updated firmware : R0056
- ③ Refer to the below for the contents updated from R0053 to R0056

A. New Functions

1 Professional CD metadata & album cover art service company, Gracenote




We integrated Gracenote service into the X40 to retrieve CD metadata and Album cover art for CD Ripping. As Gracenote is a professional CD metadata service company, you may get higher quality of metadata and album cover art for CD Ripping with X40.


※ NOTICE

But, for Gracenote service, we have to pay too much money to Gracenote company to arrange this service with free. So, we need to charge customers very small fee for these services. It costs five(5) EURO per service for one year. Can be extended for additional one year with five(5) EURO payment. Of course, if you don't like to Gracenote service with payment, CD metadata from freedb server and album coverart from Google, Amazon, Bing, etc will be available continuously like before.


※ How to buy license for Gracenote service

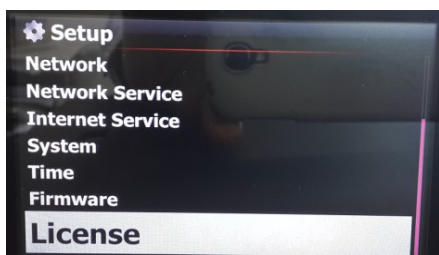


- ① Go to SETUP>License.
- ② Click 'License', then below screen will show up

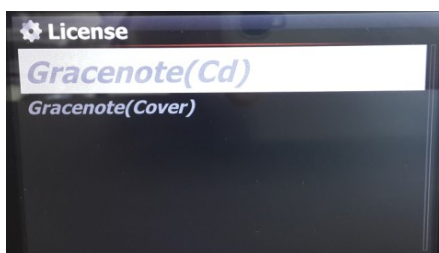

- ※ Two(2) services are available. One is CD metadata(Cd), the other is Album coverart(Cover)
- ③ Click one of them. For example, click 'Gracenote(Cd)'

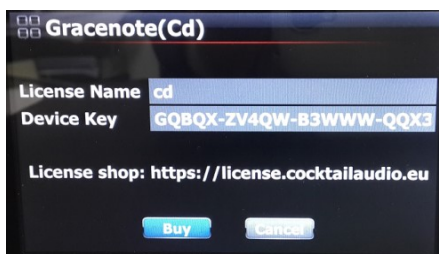


There will be License Name and Device Key, which are needed to buy license from our website(License shop)
<https://license.cocktailaudio.eu>

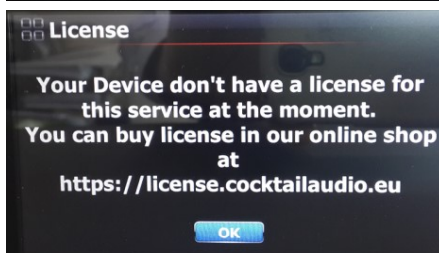

- ④ Go to 'License shop' and buy it.
 - ⑤ After the payment is booked, you will automatically receive this license on a X40 reboot.
- ※ If you use payment services like Paypal or Credit Card, your license will be activated within 15 minutes. If paid by Bank Transfer, it will take around 2-3 business days


2 Change of ID3 Tag Edit Dialog Screen in CD Ripping

2-1. When multiple metadata exist in the metadata server

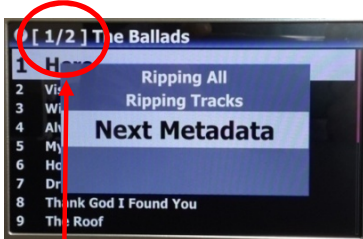


- ① Insert CD into X40, then it will get metadata from Metadata Server.
- ② Press MENU key. 'Next Metadata' option will be available if multiple metadata for the CD exist in the Metadata Server
- ③ You can select next metadata with this option.

This means that two metadata for the CD are available .

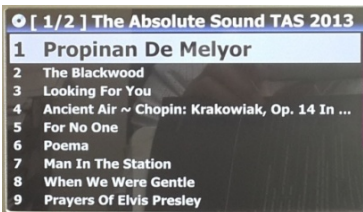

※ We recommend to check next metadata before decision, as sometimes you can get a metadata by written in your language or better metadata like below.

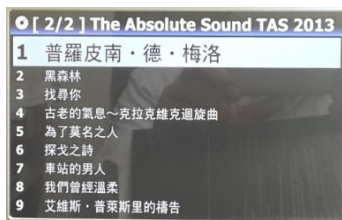


Click here to open next window for more information

Mood

Tempo



This 'Next' key will show up in case that metadata for this CD exists in metadata server with multiple number

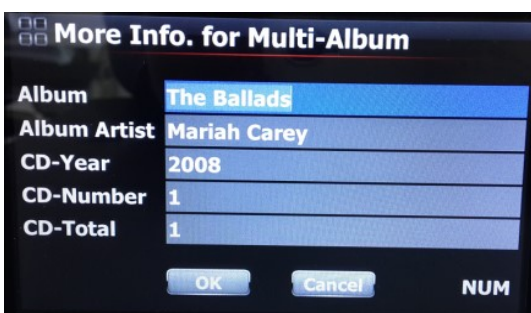

2-2. More items are added into 'Display Mode' at SETUP/MusicDB



More items like Mood/Track, Mood/Album, Year, Import Time, etc are added to 'Display Mode' option for MusicDB.

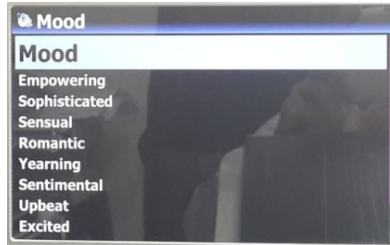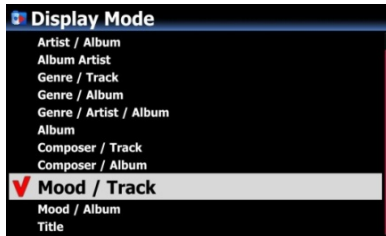


3 How to merge all tracks of Multi-Album already ripped separately into one folder(on album)



For example, you have Multi-Album, The world's Greatest Ballads, which is composed of three(3) CDs. You already ripped them separately.

① Completing CD ripping for all three CDs, go to MusicDB. There will be three(3) albums like left picture.

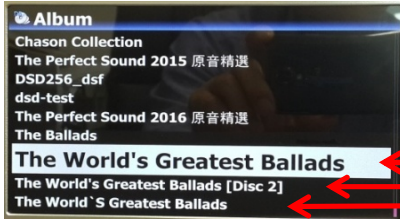


② Place cursor on the CD2(2nd Album) and press MENU>File Operation
③ Confirm 'Album Edit' to open Tag Edit screen like below picture.



④ Cursor will be on Album name like left picture. Press OK key to open 'Album Help' screen like below.



⑤ Look for the Album of CD1 and select it with OK key

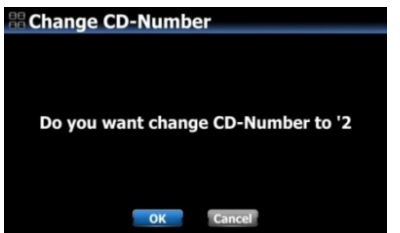

⑥ Left screen will show up to get CD number. Select OK and confirm it.



⑦ Then, Tag Edit screen of CD2 will get proper Album name and CD number like Left.

⑧ Select OK and confirm it.



⑨ CD2(2nd Album) was merged to CD1(1st Album). There will be just two Albums(CD1 and CD3) like left screen.



※ For CD3(3rd Album), you may send it to the CD1(1st Album) by the same procedure as above.



⑩ Finally, there will be only one Album like left. Click it. There will be four folder like left. There will be all tracks in the [All] folder(Album)

4 When ripping CD, how to merge all tracks of Multi-Album into one folder(on album)




For example, you have Multi-Album, The world's Greatest Ballads, which is composed of three(3) CDs. You already ripped CD1




① Insert CD2 and try ripping procedure. You will meet Tag Edit screen like left. Place the cursor on the Album name and press OK.

② Then, you will see 'Album Help' screen like left, and the cursor will be placed on the album which has same 1st alphabet as CD2's album name. This will help you to look for the CD1 easily.

③ Place the cursor on the CD1 album and press OK.

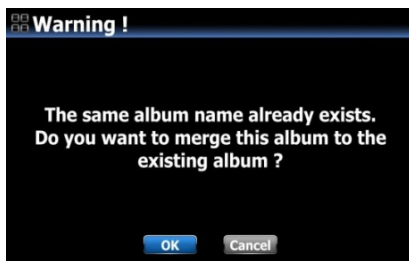


⑤ Select OK and confirm it

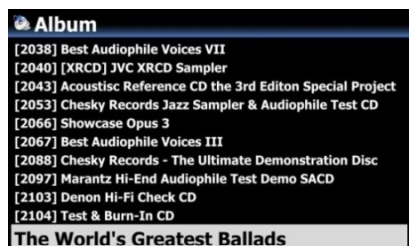

5 Commercial version of NTFS driver and HFS+ driver is adopted

We ported 'commercial version of NTFS driver and HFS+ driver to the X40 kernel to provide high-performance read/write access to storage formatted by NTFS or HFS+ also. Originally X40 supports high speed Linux(ext3) file system. So, you can enjoy high performance in file transferring with NTFS, HFS+ or Linux(ext4) formatted storages. For example, for copy or backup, etc.

6 Query Error when using Storages(HDD or USB) formatted with non-commercial version of NTFS driver

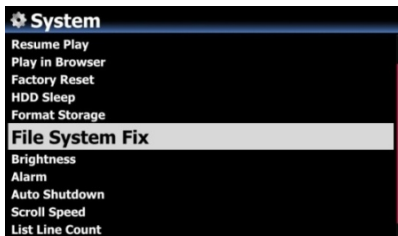

If you try using storages formatted with non-commercial version of NTFS driver(old version firmware) with the X40 new firmware, the X40 may not detect it properly at first booting, and say 'Query Error'. In this case, please try running 'File System Fix' at SETUP

7 Function of Multi-Cutting(Auto-Cutting) for recorded file


You can record iRadio, AUX In, Analog/Digital/Phono In of X40. With this new function, you can cut the file into each track by auto or by manual. To understand this function, you need to understand each key's function well by reading this manual very carefully.

※ **NOTICE: This function works in Browse mode only for most of file format, except for DSD file**
But, after running this function, all tracks(files) cut will be 'WAV' file format.

7-1 How to set 'cutting point' by auto



① Look for recorded file in Browse mode and place the cursor on the target file

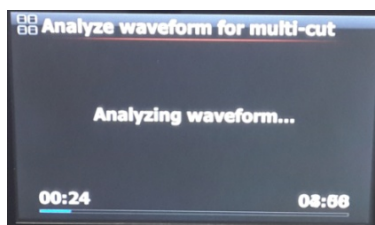

② Press MENU key and confirm 'Multi-Cut to wav...' to start analyzing waveform of the file.



There are four(4) spins to set 'cutting point'.

※ Press MENU key to toggle Enable/Disable for these spins

※ Role of each spin

-. -35 dB: to set max dB value for auto cutting.

Scope settable: -30dB~-40dB

-. 4.0 Sec: to set duration for the above max dB value.

Scope settable: 0.1 ~ 5 Sec

※ For example, if you set -35dB and 4.0Sec, 'cutting point' will be created automatically at the points where volume level -35dB below and the volume level(-35dB below) lasts for over 4 seconds

-. 1 X: to zoom graph by 1X, 2X, 4X, 8X, 16X ~ 128X

-. 1 Sec: to set 'seek time' unit when moving 'playing point' by LEFT/RIGHT arrow key. Scope settable: 0.1~30 sec

-. 1/2/3/4/5: Number of track which will be cut

-. Vertical green line: Cutting point

-. Vertical blue line: Current playing point

7-2 How to set cutting point by manual

① You have to disable four(4) spins.


② You can seek cutting point you want by LEFT/RIGHT key

(For this job, you can set 3rd spin and 4th spin properly)

③ You can set 'current playing point' as 'cutting point' by pressing UP arrow key

④ By pressing DOWN key, you can remove 'cutting point' within 10 sec and closest to 'current playing point'.

7-3 How to start cutting

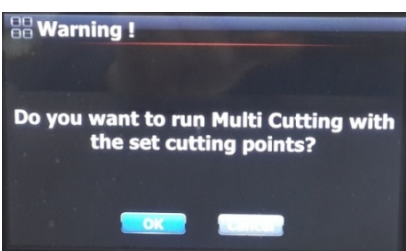

① Set cutting points properly according to the above procedure

② Press RETURN key, then it will ask 'OK' or 'Cancel' like below

③ Select OK and confirm it. Then, it will start cutting like below


※ If you confirm 'Cancel', it will go back to 'Playing Screen'

※ If you press RETURN key, it will go back to 'Multi-cut screen'

④ To see cut tracks, go to the same folder where original file is

⑤ There will be one folder whose name is same as original file

⑥ There will be five(5) cut tracks in the folder like below.

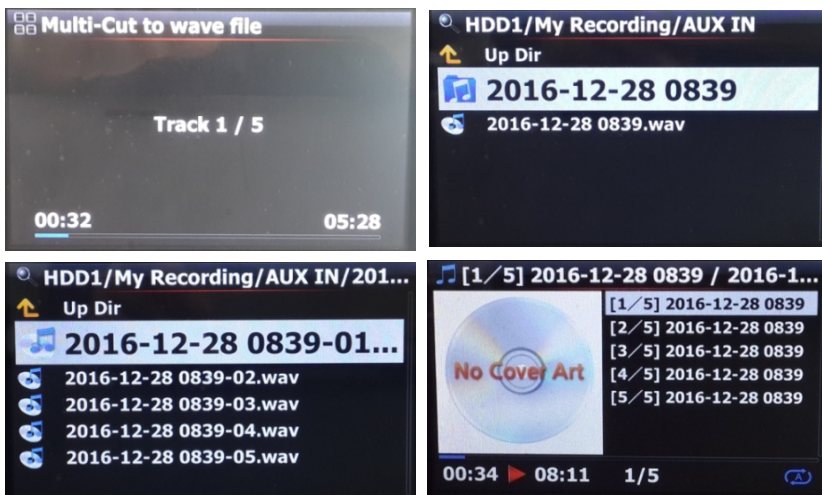

7-4 Role of each key on 'Multi-Cut Screen'

- 1) All keys of remote control except for VOL BAL, VOL+/-, PAUSE/PLAY, SETUP and POWER don't work
- 2) MENU key: to toggle Enable/Disable for four(4) spins

7-4-1 When Spin is **enabled**

<Buttons on the front of X40 unit>

- . OK : to go to next spin
- . JOG spinning : to up/down spin value
- . MENU : to disable Spin

<Keys of remote control>

- . OK : to go to next spin
- . LEFT/RIGHT: to move Spin to left/right
- . UP/DOWN : to up/down Spin value
- . MENU : to disable Spin

7-4-2 When Spin is **disabled**

<Buttons on the front of X40 unit>

- . OK : to toggle Play/Pause
- . JOG spinning : to seek 'current playing point' by the value of forth Spin
- . JOG spinning with JOG pressed : to seek 'cutting point'
- . MENU : to enable Spin


<Keys of remote control>

- . OK : no working
- . LEFT/RIGHT: to seek 'current playing point' by the value of forth Spin
- . UP : to set 'current playing point(vertical blue line)' as 'cutting point(vertical green line)'
- . DOWN : to remove the cutting point within 10 seconds and closest to the current playing point
- . MENU : to enable Spin

7-4-3 Regardless of Spin Enable or Disabled



- INPUT on the unit : to set 'current playing point(vertical blue line)' as 'cutting point(vertical green line)
- STOP on the unit : to remove the cutting point within 10 seconds and closest to the current
- NEXT/PREVIOUS of remote control : to seek 'cutting point' to right/left
- -15/+15 of remote control : to work just as original role
- CAP/NUM of remote control : to toggle 'Seek to percent mode' or 'Jump to track mode' of the numeric keys
- Numeric keys of remote control
 - * in 'Seek to percent mode' : to seek by 0%, 10%, 20% within current displaying area
 - * in 'Jump to Track mode' : to seek to starting point of each cutting area
- STOP of remote control : no working

8 Function of Jump to a song on Playing Screen

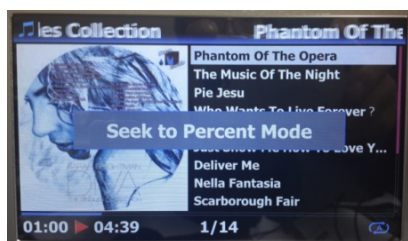


We added 'function of Jump to a Song Mode' on Playing Screen. Press CAP/NUM key of remote control to toggle 'Seek to Percent Mode' and 'Jump to a Song Mode'

- * Jump to a Song Mode : Press numeric key to seek a song
- * Seek to Percent Mode : Press numeric key to go to a certain playing position.

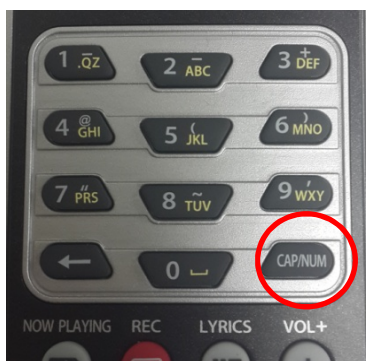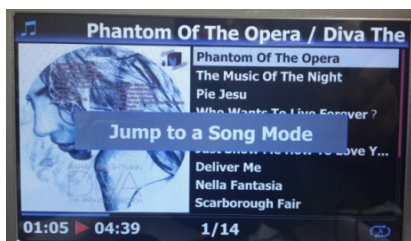


9 Album Art Image Seeking

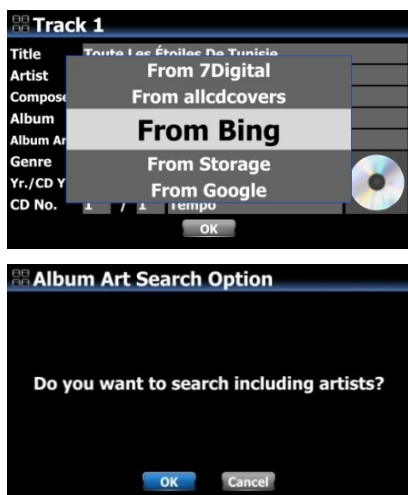

When you look for Album cover art via Bing, Google, etc, the X40 will ask you if you will search it based on 'including artist'.

If you select 'OK', it will search Album art based on Album name +Artist .
If you select 'Cancel', it will search it based on Album name only.


10 Simplification of MusicDB Menu structure

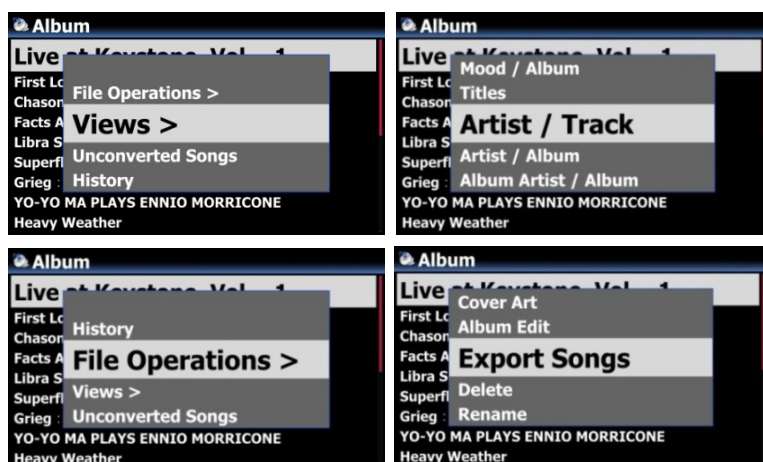

On MusicDB file list screen, press MENU key to open menu popup window. We classified to 4 groups like '**File Operation**', '**Views**', '**Unconverted Songs**' and '**History**'.

File Operation and Views will show you sub menu if you press it.

11 Added user option for Background Backup

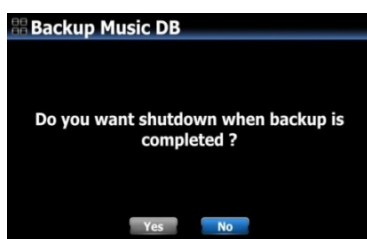


When you try 'Background Backup', the X40 will ask you 'if you want to shutdown when backup is completed'.

If choose 'Yes', the X40 will shut down by itself after backup. If choose 'No', it will show you message 'Backup is completed' for 3 seconds.

12 Automatic File System Check & Fix in booting up

We added 'Automatic File System Check & Fix' procedure in booting up. If X40 finds out something wrong in file system of local hard disk during booting up, it will run File System Fix function automatically.

13 Automatic Ripping(Auto Rip) function

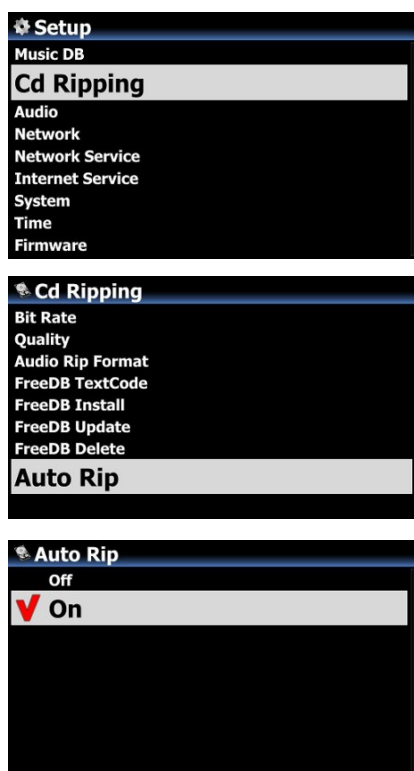

When you want to rip many CDs, this function will be helpful.


- ① Go to SETUP>CD Ripping> Set it as ON (※ Default: OFF)
- ② Insert CD into CD drive
- ③ X40 will start CD ripping and eject CD by itself after finishing ripping without pressing any key

※ NOTICE

- 1) If CD ripping is not successful, X40 will show up 'error message' and will wait for your confirmation.
- 2) After ripping, you don't like metadata or album cover art missing, you can edit the album tag info and get new album cover art through 'Album Edit' and 'Cover Art' functions

14 Added one more mode, Random in Playing Mode option

We added one more mode, Random, which will play songs randomly, but a song may be repeated.
※ NOTE : Shuffle : play songs randomly, but any song will not be repeated.

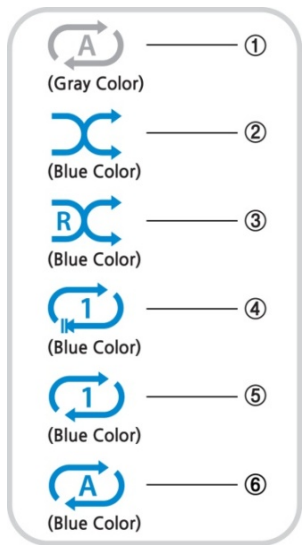

- ① Normal: Play all songs in an album or in a folder at once in sequence
- ② Shuffle: Play songs randomly, but any song will not be repeated
- ③ **Random: Play songs randomly, but a song may be repeated**
- ④ Once: Play the current song once only
- ⑤ Repeat Once: Play the current song repeatedly
- ⑥ Repeat All: Play all songs in an album or in a folder in sequence and repeatedly

B. Improvement

1 Long text scrolling for head title and selected text only




In 'Playing Screen', head title and long text selected by cursor only will scroll

2 The function to set 'Playing Section' for section repeat

※ How to set 'Playing Section'

[Playing Screen]

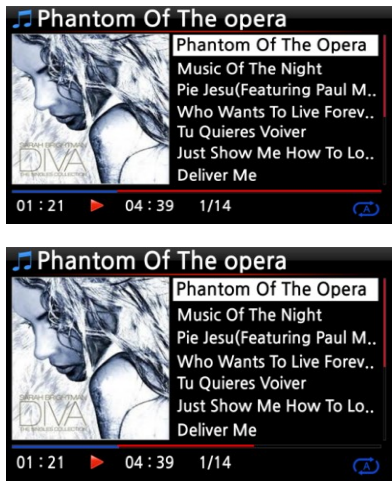

- ① On the Playing Screen, if you press LEFT ARROW key at a certain point, the point will be 'starting point'.

- ② If you press RIGHT ARROW key at a certain point, the point will be 'ending point'.

※ NOTE

- 1) If the 'Playing Section' is set, it will play repeatedly on the playing section
- 2) Numeric key(jump function) or -15/+15 SEEK Key of remote control will be helpful to set 'playing section' easily.


※ In case that 'playing section' is already set, each key works like below.

- * -15(SEEK) Key : Pressing the -15 Key one time makes 'Playing Point' move backward by 15 seconds playing time.
- * +15(SEEK) Key : Pressing the +15 Key one time makes 'Playing Point' move forward by 15 seconds playing time.
- * LEFT ARROW Key : When 'Playing Point' is below 50% of total playing time, LEFT ARROW key will make 'Starting Point' move backward by 0.25 seconds
- * RIGHT ARROW Key : When 'Playing Point' is below 50% of total playing time, RIGHT ARROW key will make 'Starting Point' move forward by 0.25 seconds
- * LEFT ARROW Key : When 'Playing Point' is over 50% of total playing time, LEFT ARROW key will make 'Ending Point' move backward by 0.25 seconds
- * RIGHT ARROW Key : When 'Playing Point' is over 50% of total playing time, RIGHT ARROW key will make 'Ending Point' move forward by 0.25 seconds
- * PREVIOUS key : 'From current point to end' will be playing section.
- * NEXT key : 'From beginning to current point' will be playing section.
- * STOP key : Playing section will be cleared.

3 The function to cut the file (to cut 'playing section')

< NOTE > This cutting function works on Browser only

※ How to cut the file (playing section)

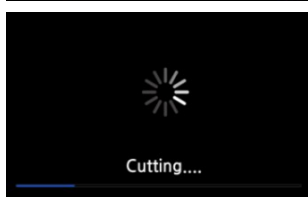

For example, you recorded iRadio like left screen.

- ① If you go into 'iRadio Recording' folder of HDD1 via Browser, there will be the recorded file (FM - Start It Up.mp3)
- ② Play the file


- ③ Set 'Playing Section' as mentioned on the number 1 like above.

- ④ Press MENU key to show up POPUP
- ⑤ Select 'Cut to Wave file' and confirm it with OK key

- ⑥ Progress message,

- ⑦ Go into 'iRadio Recording' folder. There will be same name of Wave file.
※ If you cut a Wave file, serial number will be added at the end of the file name.

- 4 [Clear the bug of remaining time display for the 1st file during File Converting procedure in Browser](#)
- 5 [Clear the bug that PAUSE function doesn't work properly in Airable Radio Playing](#)
- 6 [OSD languages\(German and Dutch\) are updated](#)
- 7 [Clear the bug that one song only is repeated when you try playing songs during CD Ripping](#)
- 8 [Improved to play i-radio PLS file](#)
- 9 [Micro-Adjustment for system stabilization](#)
- 10 [Changed name for Radios to Airable Internet Radio](#)

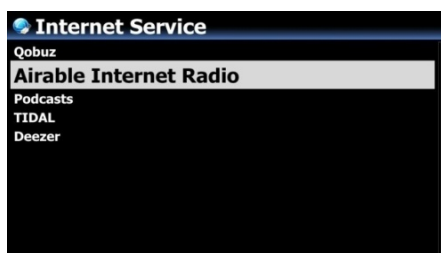

- 11 [Low level volume adjustment\(1~50: by 1dB, 51~100: by 0.5dB\)](#)
- 12 [Clear the bug that volume control doesn't work properly when optical input is connected](#)
- 13 [Micro adjustment of threshold value of the signal strength\(from -45dB to -75dB\) to improve WiFi re-connection ability after device re-boot](#)
- 14 [Clear the bug that device crashes when trying playing the song or item in TIDAL or Deezer, which is unplayable via WebInterface](#)
- 15 [When ripping several tracks only out of total tracks, X40 screen will show ripping track number/number of total track selected, instead of total track number in the album.](#)
- 16 [Clear the bug that codec info doesn't show up on the screen properly when playing FLAC or AAC on the TIDAL via WebInterface](#)
- 17 [When X40 works as UPnP server, we improved X40 to send song files by alphabet ascending order\(A-->Z\)](#)
- 18 [App Server is updated](#)
- 19 [Clear the bug that some parts are missing in Backup](#)
- 20 [Clear the bug that songs or albums existing already in MusicDB are also imported in Importing to DB](#)
- 21 [Clear the bug that Gapless function doesn't work properly after playing songs in Online Music Services like Airable, Tidal, Deezer, etc](#)
- 22 [Added 'Rename' option at the Popup MENU for Browser mode](#)
- 23 [Improved to recognize CD properly when X40 is booted up with CD inserted into CD drive](#)
- 24 [After running 'Factory Reset' and boot up X40, we improved to do format HDD in case that unformatted HDD is installed](#)

Thank you very much